
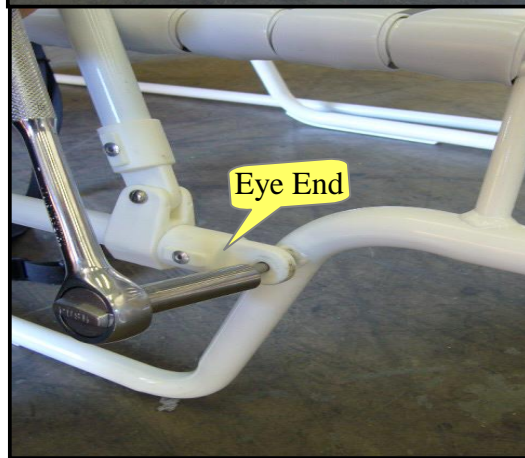


Sun-Bimini Sun-Shade Installation for Cumulus and Nimbus Chaise

(Tools Needed 7/16 Wrench or Ratchet)

4

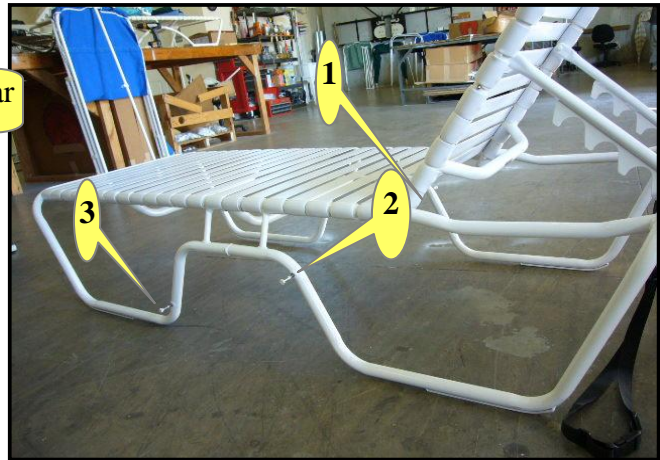

- A)** Place bimini down positioned with black bumpers on the ground.
- B)** Open the bimini completely and insert the spreader bar by attaching each end to the center of the bimini. The spreader bar should fit tightly, and have a downward bow, when installed properly.
- C)** Slide bimini towards chaise lounge aligning the eye ends with pre-drilled holes 1 and 2, insert and tighten bolts provided using the appropriate tools.
- D)** Extend adjusting arm #4, to align with pre-drilled hole 3. Insert and tighten bolt.

